

Spare parts / Accessories


1" Installation Kit

The optional installation kit comprises a product float, a water float and a screw-in unit. It makes it possible to install a VISY-Stick using an R1 threaded coupler. The screw-in unit is also available in stainless steel.



1" Installation Kit

1" Installation Kit

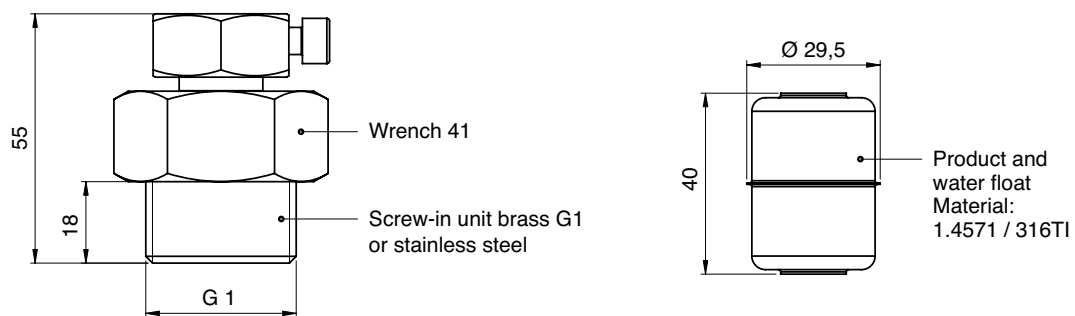

Dimensions in mm

Spare parts / Accessories

VISY-RFT Installation kit

Installation kit for mounting a VISY-RFT module.



RF-Meter

The RF meter measures radio field strength for a comfortable start-up of VISY-X RF.



RFT-Cable

Connecting cable for VISY-RFT installations, poor damping



RFT-Battery

Battery for the VISY-RFT Module



BNC Connector pins

consisting of:
 2x BNC-Cable pin crimp
 1x Adapter BNC-F



Junction Tube

The 5-pin junction tube makes it quick and easy to establish the connection between the VISY-Stick and the cable to the VISY-Command.



Connection Cable M12

The blue, fuel-resistant installation and connection cables are two metres long 4-wire and available in two versions: straight and 90° elbow.



VISY-Connecting cable

Cable for VISY-X installations
 4-wire, blue, fuel resistant

