



## VISY-Stick probe lengths

Screw-In installation

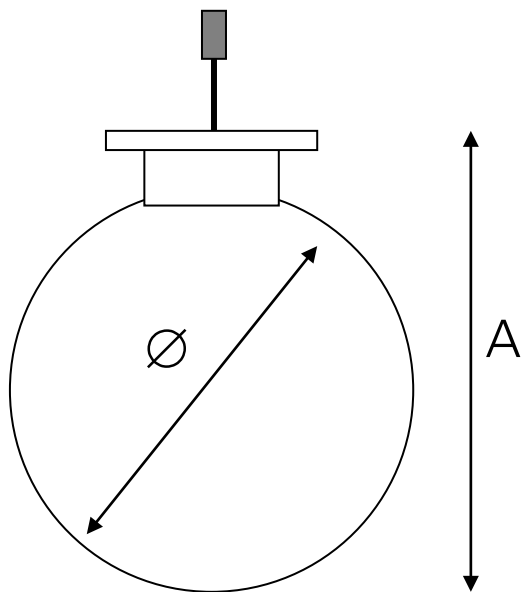

Riser installation

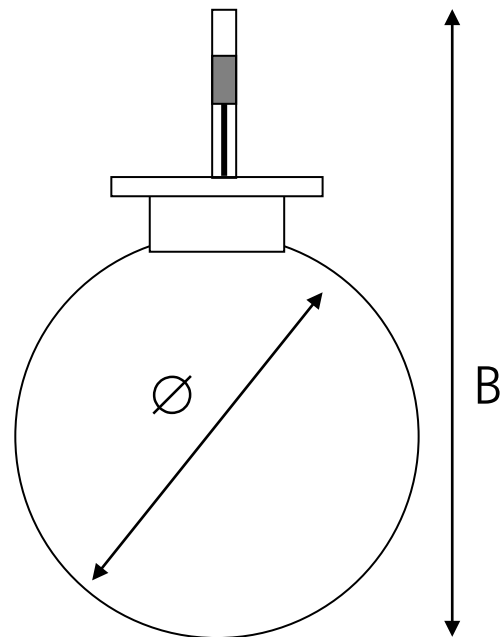

$$B = A + \text{Riser Length}$$

For Example:

Tank $\varnothing = 1,25$ m	A = 1,40 m	B = 2,30 m	VISY-STICK = 1,90 m
Tank $\varnothing = 1,65$ m	A = 1,80 m	B = 2,50 m	VISY-STICK = 1,90 m
Tank $\varnothing = 1,90$ m	A = 2,05 m	B = 2,80 m	VISY-STICK = 2,30 m
Tank $\varnothing = 2,50$ m	A = 2,65 m	B = 3,30 m	VISY-STICK = 2,80 m
Tank $\varnothing = 3,00$ m	A = 3,15 m	B = 3,70 m	VISY-STICK = 3,20 m